

Stick Logger Quick Guide

Model:LSE-4W



Warning:
Please remove logger after power off.

Download APP



SOLARMAN Smart
for end user




SOLARMAN Business
for business

iPhone:Search "SOLARMAN Smart" in Apple Store.
Android:Search "SOLARMAN Smart" in Google Play.


1. Stick Logger Net Interface Installation

- Step1:** Please remove waterproof cap, waterproof inner core, waterproof joint body in order. Please do not lose waterproofing ring.
- Step2:** Cover network line with waterproof cap, waterproof inner core, waterproof joint body and waterproofing ring in order(Force to open waterproofing inner core.)
- Step3:** Insert RJ545 into Stick Logger's interface. Tighten waterproof joint body and waterproof cap in order. Prevent network line loosening during the tightening process.

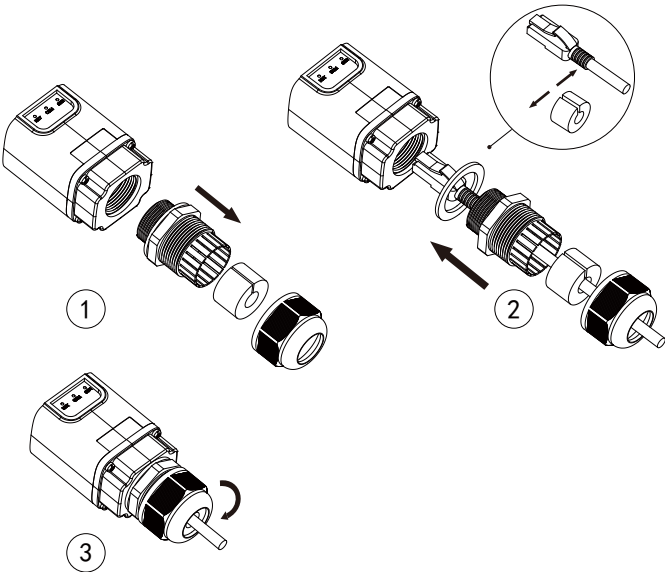


2. Stick Logger Installation

Step1:Assemble logger to the inverter communication interface as shown in the diagram.

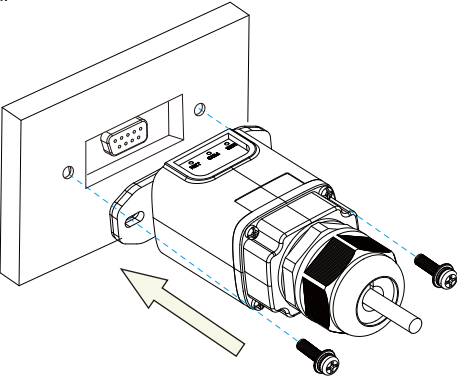

Remove: Cable RegisteredJack

 

Use crowbar to press buckle of cable RegisteredJack, then draw out RegisteredJack.




Warning:
Please do not hold the logger body to rotate while install or remove the logger.



3.Connect to Router

Step1: Connect another end of network line to LAN Interface.

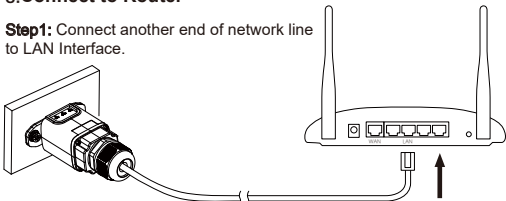

DHCP:Obtain IP address automatically

Instructions for WiFi and Ethernet
Ethernet transmission:
Connect the router with a cable.

WiFi transmission:
Network configuration is required. (No cable needed.)

When connecting to a cable in WiFi transmission mode, WiFi will automatically disconnect, and the data will be uploaded via Ethernet after the logger automatically restarts.

In Ethernet transmission mode, WiFi configuration will also prompt, and data will still be transmitted through Ethernet; After disconnecting the cable, the logger automatically restarts and uploads data via WiFi.

2. Logger Status

2.1 Check Indicator light

Lights	Implication	Status Description(All lights are single green lights.)
NET	Communication with router	1.Light off: Connection to the router failed. 2.On 1s/Off 1s(Slow flash): Connection to the router succeeded. 3.Light keeps on: Connection to the server succeeded. 4.On 100ms/Off 100ms(Fast flash): Distributing network fast.
COM	Communication with inverter	1.Light keeps on: Logger connected to the inverter. 2.Light off: Connection to the inverter failed. 3.On 1s/Off 1s(Slow flash): Communicating with inverter.
READY	Logger running status	1.Light off: Running abnormally. 2.On 1s/Off 1s (Slow flash): Running normally. 3.On 100ms/Off 100ms(Fast flash): Restore factory settings.

The normal operation status of the stick logger, when router connected to the network normally:

- 1.Connection to the server succeeded: NET light keeps on after the logger powered on.
- 2.Logger running normally: READY light flashes.
- 3.Connection to the inverter succeeded: COM light keeps on.

3. Abnormal State Processing

If the data on platform is abnormal when the stick logger is running, please check the table below and according to the status of indicator lights to complete a simple troubleshooting. If it still can not be resolved or indicator lights status do not show in the table below, please contact Customer Support.

(Note: Please using the following table query after power-on for 2mins at least.)

NET	COM	READY	Fault Description	Fault Cause	Solution
NET	COM	READY			
Any state	OFF	Slow flash	Communicate with inverter abnormally	1.Connection between stick logger and inverter loosen. 2.Inverter does not match with stick logger's communication rate.	1.Check the connection between stick logger and inverter. Remove the stick logger and install again. 2.Check inverter's communication rate to see if it matches with stick logger's. 3.Long press Reset button for 5s, reboot stick logger.
OFF	ON	Slow flash	Connection between logger and router abnormal	1.Stick logger does not have a network. 2.Router WiFi signal strength weak.	1.Check if the wireless network configured. 2.Enhance router WiFi signal strength.
Slow flash	ON	Slow flash	Connection between logger and router normal, connection between logger and remote server abnormal.	1.Router networking abnormal. 2.The server point of logger is modified. 3.Network limitation, server cannot be connected.	1.Check if the router has access to the network. 2.Check the router's setting, if the connection is limited. 3.Contact our customer service.
OFF	OFF	OFF	Power supply abnormal	1.Connection between stick logger and inverter loosen or abnormal. 2.Inverter power insufficient. 3.Stick Logger abnormal.	1.Check the connection, remove the stick logger and install again. 2.Check inverter output power. 3.Contact our customer service.
Fast flash	Any state	Any state	Networking status	Normal	1.Exit automatically after 2mins. 2.Long press Reset button for 5s, reboot stick logger. 3.Long press Reset button for 10s, restore factory settings.
Any state	Any state	Fast flash	Restore factory settings	Normal	1.Exit automatically after 1mins. 2.Long press Reset button for 5s, reboot stick logger. 3.Long press Reset button for 10s, restore factory settings.

USER MANUAL for SOLARMAN Smart APP

Please make sure Bluetooth and WiFi are ON and the router can connect to the network normally.

1.Registration

Go to SOLARMAN Smart and register.

Click "Register" and create your account here.

2.Create a Plant

Click "Add Now" to create your plant.

Please fill in plant basic info and other info here.

3.Add a Logger

Method 1: Enter logger SN manually.

Method 2: Click the icon in the right and scan to enter logger SN

You can find logger SN in the external packaging or on the logger body.

4.Network Configuration

If WiFi is applied, please follow the steps below to configure the WiFi network;
If Ethernet is applied, there is no need for network configuration.

Step 1: Click "Go to Configure" to set the network. (Please make sure Bluetooth and WiFi are ON.)

Step 2: Please wait for a few minute. Then click "Done" and view plant data.



Notice:
5G WiFi is not supported .

If configuration failure occurs, please check the following reason and try it again.

- (1) Make sure WLAN is ON.
- (2) Make sure WiFi is normal.
- (3) Make sure wireless router does not implement the white-black list.
- (4) Remove the special characters in Wi-Fi network.
- (5) Shorten the distance between the phone and device.
- (6) Try to connect to other Wi-Fi.



Warning: Please make sure the stick logger is working properly before you leave the site. If there is anything abnormal, please do not leave the site and contact customer service at the first time.
Customer service number: 400-181-0512

If you have any technical queries about our products, please contact us and provide the following information:

1. Product model and serial number of stick logger.
 2. Product model and serial number of connected inverter.
- Thank you for your support and cooperation!

WARRANTY CARD

Dear Customers,

Thank you very much for using our products. In order to provide you with better service, please fill in the warranty card and reserve it carefully.

User Name		Customer Name	
Purchase Date		Customer Phone	
Product Name & Model		Product SN	
Customer Address			
Order No.			
Maintenance Records	Date	Failure Cause and Treatment	

Warranty Policy

If there is any breakdown which caused by the product's own quality, customers can send the warranty card with the product to our Customer Service Center.

Notice

1. According to the prescription, the warranty period is 5 years (From the day when you receive the product). During the warranty period, we provide free maintenance service to solve all non-artificial quality problems if the product is under normal usage circumstance. If the product exceeds the warranty period, only maintenance cost will be charged.
2. If the failure of the product is not due to quality problems (such as improper use, improper storage, unauthorized disassembly, etc.), maintenance cost will be charged.
3. Please pay for back goods freight in advance. Freight collect is not accepted.

Support Email: customerservice@solarmanpv.com

Customer Hotline: +86 400 181 0512

Company Address: Block F4, China IoT International Innovation Park, No.200, Linghu Avenue, Wuxi, Jiangsu, P.R.China